

Installation Instructions

INSTALLATION & MAINTENANCE PRECAUTIONS

- 1. Stream33 Tankless Water Heater Valve Kit are intended for installation directly at the tankless water heater.
- 2. The cold water valve threads directly to the cold water inlet and the hot water valve threads directly on the hot water outlet.
- 3. The pressure relief valve threads directly onto the 3/4" port on the side of the hot water valve.
- 4. Drain valves (if applicable) should remain closed during normal operation. Do not rely on the drain cap to stop the water from draining. When draining, always remove drain caps slowly to ensure that no pressure exists.
- 5. Before operating the relief valve lever, ensure an adequate drain line has been connected to this valve directing the flow of hot water from the valve to a proper place of disposal otherwise personal injury may result.
- 6. The relief valve lever must be operated at least once a year to ensure that the drain lines are clear.
- 7. At least every two years the Tankless Water Heater Valve Kit should be inspected by a licensed plumbing contractor or qualified plumbing service company and replaced if necessary.

OPERATING SPECIFICATIONS

Maximum Inlet Pressure 200 PSI 200° F (93° C) Maximum Temperature 630,000 BTU Max Performance Rating Relief Pressure 150 PSI

3/4" FNPT Union **Appliance Connection System Connections** 3/4" FNPT











